


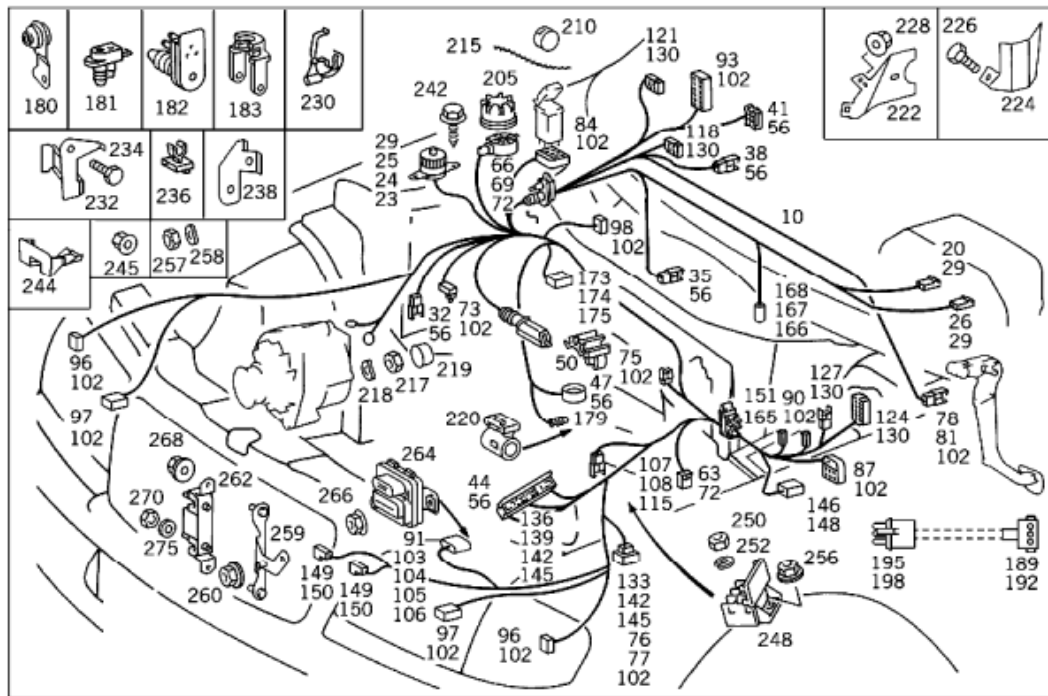

010	2025408832				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065	
010	2024401605				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851	
010	2024400806				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861	
010	2025401732				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065	
010	2024406805				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851	
010	2024400606				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861	
010	2024401006				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861	
010	2025401832				
001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*065	

010	2024407105				
	001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024401306				
	001	LM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2025401632				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065
010	2024401505				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024400706				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2024406905				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024401106				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2025401532				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065
010	2024401405				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024400906				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2025401932				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*065
010	2025401432				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*065
010	2024407005				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*066 *851
010	2024401206				
	001	LA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2024408206				

	001	L	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*870 *871
010	2025404705				
	001	RM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065
010	2024402205				
	001	RM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024401606				
	001	RM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2025404905				
	001	RM	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*065
010	2025404805				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065
010	2024402105				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024401706				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2025405105				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*065
010	2024402005				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*066 *851
010	2024401806				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*860 *861
010	2025405005				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*065
010	2025405205				
	001	RA	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED; USED WITH AIR CONDITIONER	*065
010	2024408306				
	001	R	CABLE HARNESS	ENGINE CABLE HARNESS,BODY MOUNTED	*870 *871
020	2025451228				
	001		PLUG	INSTRUMENT CLUSTER	
023	2025450126				

	001		PLUG SOCKET	DIAGNOSIS BOX	
024	2025450503				
	001		CAP	DIAGNOSIS BOX	
025	0089976681				
	001		GROMMET	DIAGNOSIS BOX	
026	2025452128				
	001		PLUG	INSTRUMENT CLUSTER	*851
026	2105451628				
	001		PLUG	INSTRUMENT CLUSTER	*860
029	0035454826				
	NB		ROUND PIN BUSHING		1 MM
029	0085455526				
	NB		CONTACT BUSHING		TO 2105451628 *860
032	0125458628				
	001		PIN BUSHING HOUSING	INTAKE AIR TEMPERATURE SENSOR	*065 *068
035	0025456326				
	001	A	PIN BUSHING HOUSING	KICK-DOWN SWITCH	
038	0245450328				
	001	M	PLUG	TEMPOMAT(CRUISE CONTROL) PLUG-CONNECT.	
038	0245450328				
	001	A	PLUG	ASR PLUG-CONNECTION	
041	0235455028				
	001		PIN BUSHING HOUSING	REAR FUEL PUMP CABLE HARNESS PLUG-CONNECTION	
044	2025453528				
	001		PLUG	ENGINE CABLE HARNESS PLUG-CONNECTION	
047	1405400381				
	001		PIN BUSHING HOUSING	OXYGEN SENSOR	
047	1405403281				
	001		PIN BUSHING HOUSING	OXYGEN SENSOR	
056	0035450626				
	NB		ROUND PIN BUSHING		2,5 MM
056	0045454026				
	NB		PIN BUSHING		4 MM
063	0145450128				
	001		PIN BUSHING HOUSING	WINDSHIELD WASHER NOZZLE HEATING	
066	0225458828				
	001		COVER	TRIMMER PLUG	EZL
069	0135454728				
	001		PIN BUSHING HOUSING		TO 022 545 88 28

072	0025459926				
	NB		ROUND PIN BUSHING		2,5 MM
073	0115458528				
	001		PIN BUSHING HOUSING	PLUG CONNECTION	KL 87 UG
075	0115457128				
	001		PIN BUSHING HOUSING	ACTIVATED CHARCOAL FILTER	*861
075	0115457128				
	001	A	PIN BUSHING HOUSING	CHANGE-OVER VALVE USED FOR INCREASE IN SHIFT POINT	
075	0115457128				
	001		PIN BUSHING HOUSING	COOLING WATER LEVEL INDICATOR	*880
075	0115457128				
	001	A	PIN BUSHING HOUSING	SECOND DRIVING PROGRAMM CHANGE-OVER VALVE	
076	0075455426				
	001		PIN BUSHING HOUSING	REGENERATION VALVE	*870
077	0005452839				
	001		GASKET		TO 007 545 54 26 *870
078	0085453728				
	001	M	PIN BUSHING HOUSING	CLUTCH ACTUATION	*065
081	0085453828				
	001	M	COVER		TO 008 545 37 28 *065
084	0155453028				
	001		PIN BUSHING HOUSING	OVERLOAD PROTECTOR	*861
087	1265450128				
	001		PIN BUSHING HOUSING	INTAKE MANIFOLD HEATING RELAY; 6-POLE	*065
087	1265450128				
	001		PIN BUSHING HOUSING	AIR BLOW-IN RELAY	CODE 920 *065
090	1265452428				
	001		PIN BUSHING HOUSING	ADDITIONAL FAN RELAY	
091	0345459328				
	001		PIN BUSHING HOUSING	CONTROL MODULE,AUXILIARY FAN	7 POLIG
093	1265452328				
	001	A	PIN BUSHING HOUSING	KICK-DOWN CUT-OFF RELAY	
096	0115450128				

002	PIN BUSHING HOUSING	BLINKER LIGHT	*066
096 0115450128			
001	PIN BUSHING HOUSING	WINDSHIELD WASHER PUMP;2-POLE	*066 *861
096 0115450128			
001	PIN BUSHING HOUSING	ADDITIONAL WATER PUMP; BIPOLAR	*066
097 0115455028			
002	PIN BUSHING HOUSING	HEADLAMP	*066
098 0125452428			
001	PIN BUSHING HOUSING	HEATING WATER VALVE	*066
102 0035452626			
NB	ROUND PIN BUSHING		4 MM
102 0055456826			
NB	CONTACT SPRING		0,5-1,0 MM2, TO 007 545 54 26 *870
103 0085456726			
NB	CONTACT SPRING		1,5-2,5 MM2
103 0085456826			
NB	CONTACT SPRING		0,5-1,0 MM2
104 0005452939			
NB	GASKET		TO 008 545 67 26
104 0005452839			
NB	GASKET		TO 008 545 68 36
105 0125451226			
NB	CONTACT BUSHING		2,5-4,0 MM2
105 0095452726			
NB	ROUND PIN BUSHING		4,0-6,0 MM2
106 0015450680			
NB	GASKET		TO 012 545 12 26; TO 009 545 27 26
107 0085450828			
001	PIN BUSHING HOUSING	BIPOLAR; ADDITIONAL FAN	
107 0085450828			
001	PIN BUSHING HOUSING	WINDSHIELD WASHER WATER LEVEL	
107 0085450828			
003	PIN BUSHING HOUSING	BRAKE FLUID CONTROL,BRAKE LINING WEAR INDICATION;BIPOLAR	
107 0085450828			
001	PIN BUSHING HOUSING	COOLING WATER LEVEL INDICATOR	*871

108	0005457903			
	005	CAP		TO 008 545 08 28
115	0015454426			
	NB	ROUND PIN BUSHING		4 MM
121	0235455228			
	001	PLUG HOUSING	INBOARD CABLE HARNESS PLUG-CONNECTION	
124	0205456928			
	001	PLUG	ENGINE CABLE HARNESS PLUG-CONNECTION	
127	0175451228			
	001	PLUG	ENGINE CABLE HARNESS PLUG-CONNECTION	*065
127	0175451228			
	001	PLUG	HEADLAMP CABLE HARNESS	*066
127	0205454928			
	001	PLUG	ENGINE CABLE HARNESS PLUG-CONNECTION	*066
130	0165451428			
	NB	PLUG PIN		2,5 MM
130	0205459528			
	NB	PLUG PIN		4 MM
136	0075457528			
	001	PIN BUSHING HOUSING	PRESSURE SWITCH	*065
139	0005462635			
	001	BOOT	PRESSURE SWITCH	TO 007 545 75 28 *065
142	0005452839			
	NB	RUBBER RING	CLUTCH ACTUATION	TO 005 545 66 26, 005 545 54 26
145	0055456826			
	NB	CONTACT SPRING		TO 005 545 66 26, 005 545 54 26
145	0035450226			
	NB	CONTACT SPRING		TO 007 545 75 28
146	0195458228			
	001	PLUG	LAMP CONTROL DEVICE,10-POLE	*066
148	0045455326			
	NB	FLAT PIN BUSHING		1.5-2.5 MM2 *066
148	0115458126			
	NB	CONTACT SPRING		0.5-1.0 MM2 *066
149	0005461145			
	004	INSULATING SLEEVE	HORN	*066

150	0005468340				
	NB	PIN BUSHING	HORN		*066
151	0255459128				
	001	PLUG	FUSE BOX		M *065
151	0225452428				
	001	M PLUG	FUSE BOX		F *065
151	0265453928				
	001	A PLUG	FUSE BOX		L *065
151	0265454028				
	001	PLUG	BIPOLAR FUSE BOX		M *065
151	0005454730				
	001	SHELL	FUSE BOX		F1 *066
165	0045452126				
	NB	CONTACT SPRING			2,5 MM2 *065
165	0035456826				
	NB	CONTACT SPRING			0,5 - 1 MM2 *065
165	0085457926				
	NB	CONTACT SPRING			2.5-4.0 MM2 *066
165	0065457126				
	NB	CONTACT SPRING			1,5 - 2,5 MM2 *066
165	0065453626				
	NB	CONTACT SPRING			0,35 - 1,0 MM2 *066
173	2205400781				
	001	PIN BUSHING HOUSING	BRAKE ASSIST,SIX-PIN		
174	0005456980				
	NB	GASKET			0,5-0,75 MM2
177	0085456726				
	NB	CONTACT SPRING			2,5 MM2
178	0005452939				
	NB	GASKET			TO 008 545 67 26
179	2025452428				
	001	PLUG	OXYGEN SENSOR		*065

180	0001595740				
	001	BRACKET	ALTERNATOR CABLE HARNESS		
181	1299972281				
	001	GROMMET	ELECTRIC CABLE THRU FIRE WALL		
182	2025460037				
	001	GROMMET	ELECTRIC CABLE THRU FUSE BOX AND RELAY CASE		
183	0009880676				
	001	L CLAMP	PLUG,IDLING-SPEED CONTROL		
205	0255455028				
	001	TRIMMER PLUG		HFM	
210	0009880970				
	001	LEAD SEAL	TRIMMER PLUG		
	0013670000				
215	15				
	001	WIRE	TRIMMER PLUG	180 MM	*404
	3040320080				
217	06				
	001	NUT	CABLE TO ALTERNATOR		
	0009340050				
217	08				
	001	NUT	CABLE TO ALTERNATOR		
	0001370082				
218	12				
	001	SPRING WASHER	CABLE TO ALTERNATOR	D 8MM	
	0001370052				
218	03				
	001	SPRING WASHER	CABLE TO ALTERNATOR	D 5MM	
	9130180132				
219	01				
	001	PROTECTION CAP	CABLE TO ALTERNATOR	KLEMME 30	
230	0015452940				
	001	L BRACKET	PLUG CONNECTION TO FIRE WALL		
232	2025455940				
	001	L BRACKET	ATTACHMENT, LINE, HFM-CONTROL MODULE	*861	
	3040170060				
234	34				
	001	L SCREW		TO 202 545 59 40	
				*861	
236	1405462043				
	001	BRACKET	PLUG CONNECTION	KL 87 UG	*851
238	2025456740				
	001	BRACKET		AN	
				AUSGLEICHSBEHAE	
				LTER LINKS	*880
	9141280043				
242	00				
	002	SHEET METAL SCREW	DIAGNOSIS BOX TO BRACKET		
244	2025455640				

	001	BRACKET	AT BRAKE BOOSTER	*860
245	9130230060 01			
	002	NUT	BRACKET MOUNTING	
248	2025460941			
	001	CABLE CONNECTOR	TRIPLE	*891
250	0009340040 06			
	001	NUT	CABLE HARNESS TO CABLE CONNECTOR	
252	0001370042 02			
	001	SPRING WASHER	CABLE HARNESS TO CABLE CONNECTOR	
256	9130230060 01			
	002	NUT	CABLE CONNECTOR TO SPRING DOME	
257	0009340060 07			
	003	NUT	GROUND CABLE TO DAMPER STRUT DOME	
258	0001370062 04			
	003	SPRING WASHER	GROUND CABLE TO DAMPER STRUT DOME	
259	2025401973			
	001	BRACKET	SERIES RESISTOR	
260	9130230060 01			
	003	NUT	BRACKET TO STRUT	
262	0001583945			
	001	SERIES RESISTOR	AUXILIARY FAN	*851
264	0165459632			
	001	ESG CONTROL UNIT	ADDITIONAL FAN	*860
266	9130230060 01			
	002	NUT	CONTROL MODULE,AUXILIARY FAN	*860
268	9130110060 00			
	002	NUT	SERIES RESISTOR TO BRACKET	
270	0009340050 20			
	002	NUT	WIRING HARNESS ON SERIES RESISTOR	
275	0001250053 24			
	002	WASHER	WIRING HARNESS ON SERIES RESISTOR	