

Parrot for MERCEDES C-CLASS (W203)

Parrot is a universal interface that allows you to control the Parrot CK3100 directly with the OEM steering wheel commands. Parrot can work with car protocols such as CAN, KBUS or resistive systems.

Installation

Compatibility Car models MERCEDES C-CLASS (W203) > 2004


Parrot reference For Parrot CK3100
Parrot : **CF0033UN3111**



Wiring diagram for CK3100

It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional. In this technical document, you will find all information for correctly install your MULTICAN interface.

Important: Usually the 12v ignition is supplied by MULTICAN unit.

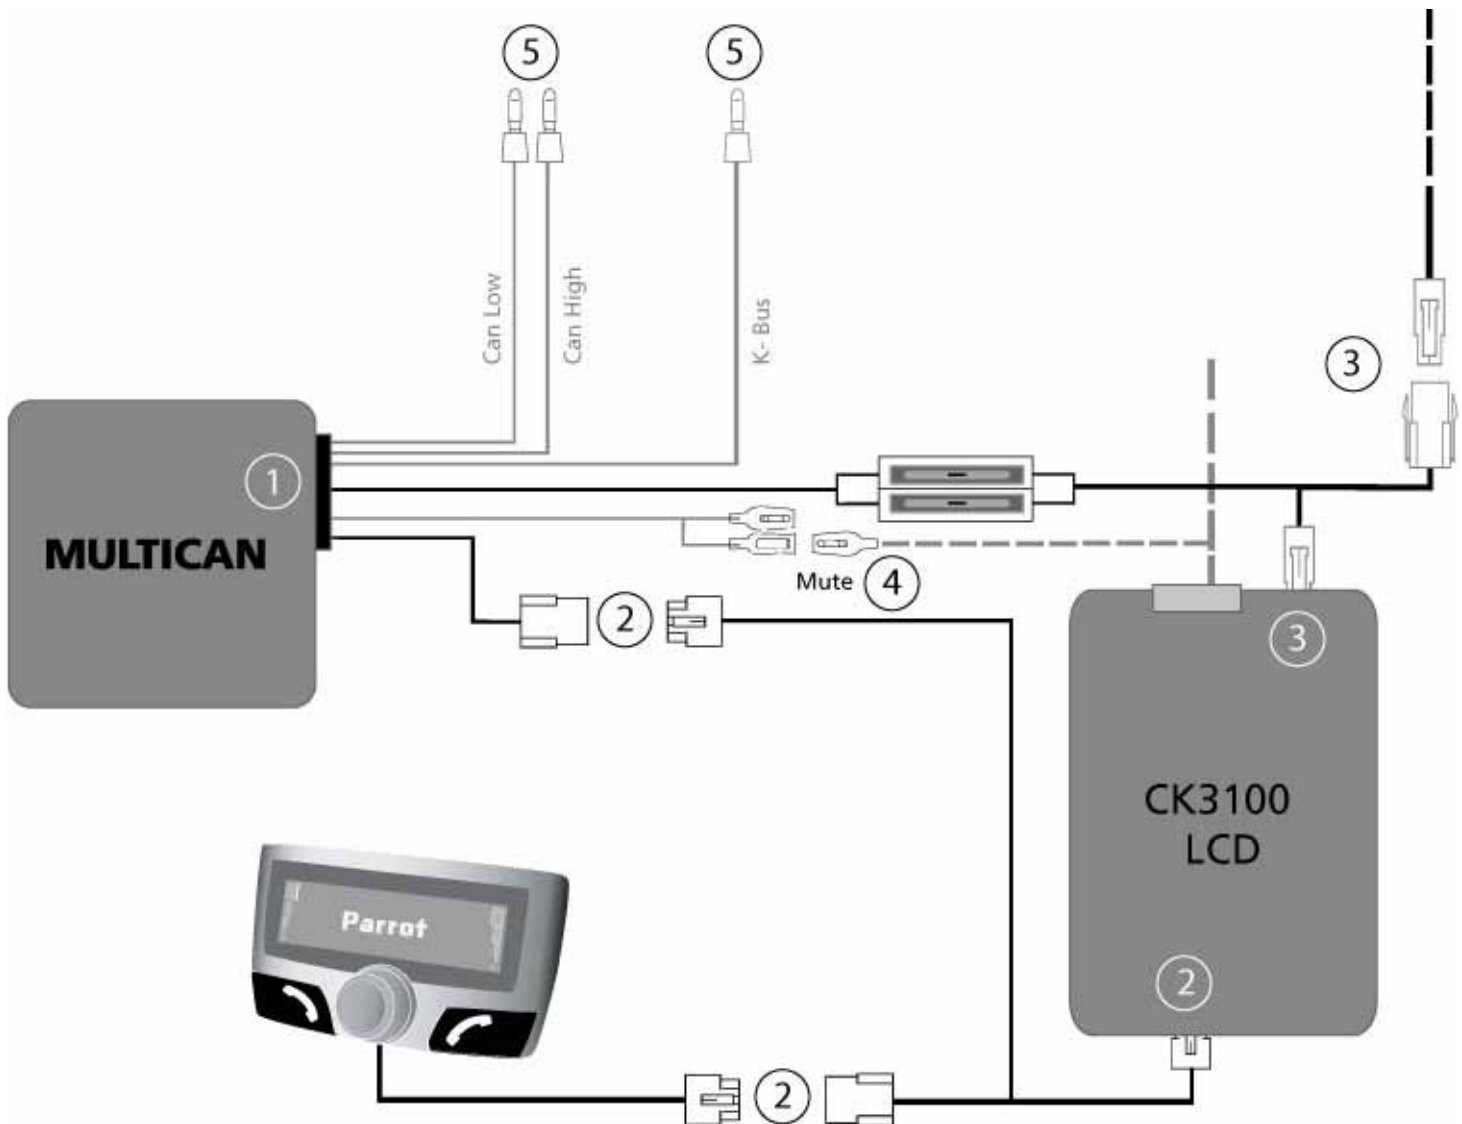

- | | | |
|----------------------|----------------------|---------------------|
| ① MULTICAN interface | ③ Supply connections | ⑤ CAN Configuration |
| ② Keypad Adapter | ④ Mute input | |


1

Connect the power cable of the MULTICAN interface to the 14-way connector of the MULTICAN interface.



2

Join the connector of the kit's control keypad to the connector on the interface's power cable.
Connect the LCD harness to the adapter.

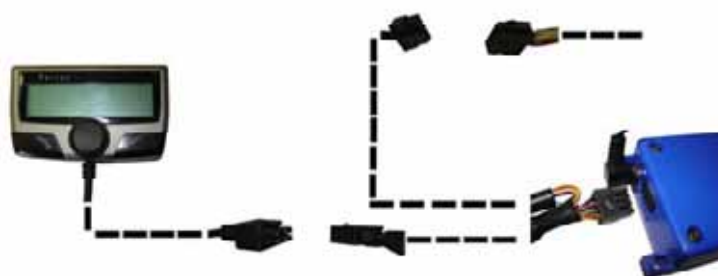

3


Connect the MULTICAN interface's power cable to the Parrot control unit and to the power cable of the hands-free kit.



4

Connect the yellow mute wire of the MULTICAN interface:
- to the Parrot yellow mute wire
- and to the car stereo's mute input if applicable

Notes: If you don't know where your mute input is, see the usual guide of your radio or contact your dealer for having the correct position of mute input.

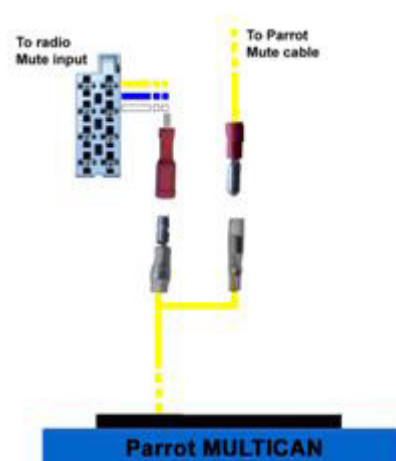


5

CAN Configuration Mercedes

The wires corresponding to the CAN protocol must be connected correctly to your car stereo's CAN information. It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

N°		Color	Description
11		Green	CAN High
9		White	CAN Low
Not used		Violet	K-BUS

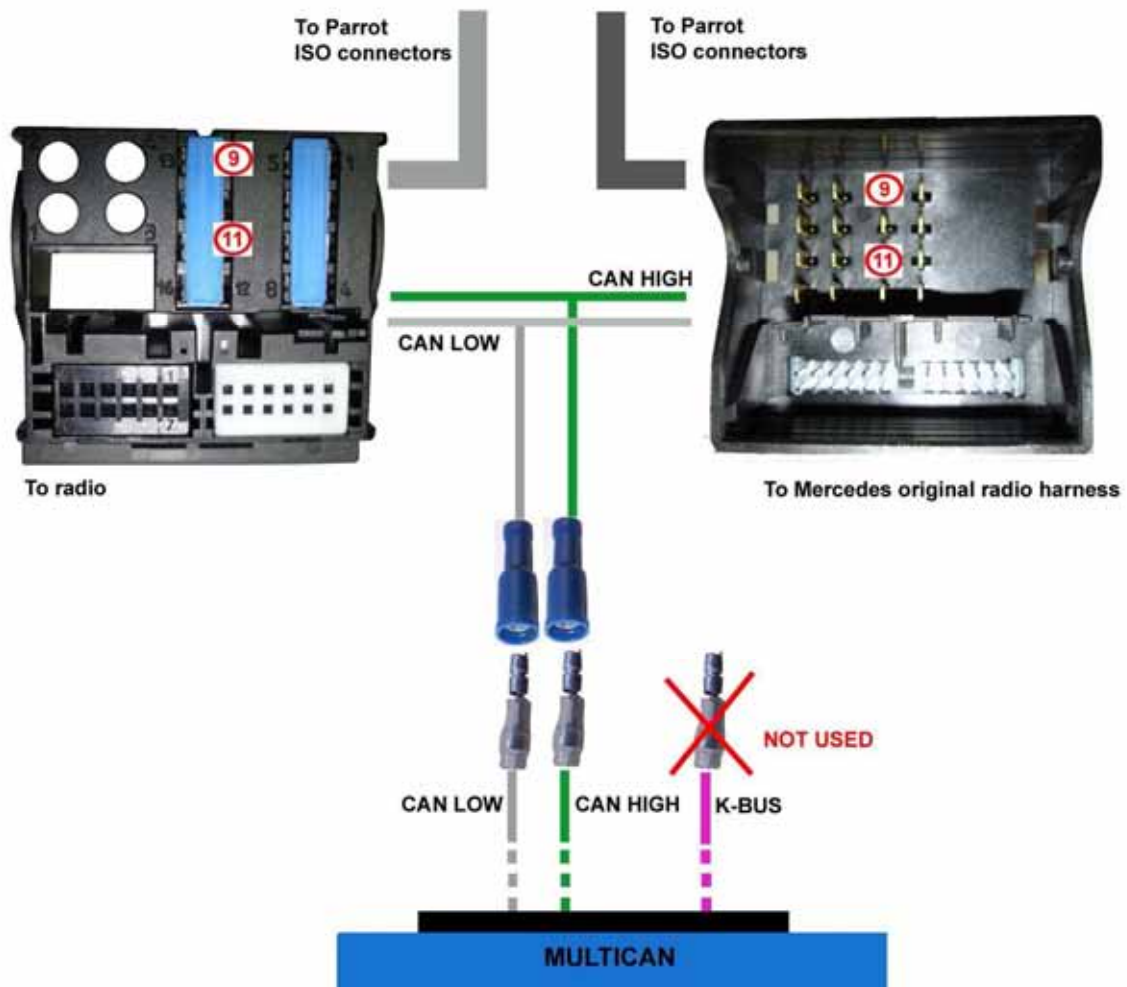

**Connect the white wire corresponding to CAN Low to pin 9.
Connect the green wire corresponding to CAN High to pin 11.**

CK3100 Mode 3



	Confirm menu choice / Confirmer / Validar la selección / Bestätigung einer Auswahl / Confermare la selezione / De selectie valideren
	Back menu / Menu précédent / Menú anterior / Rückkehr zum vorhergehenden Menü / Consente di tornare al menu precedente / Vorige menu
	Adjust the volume / Modifier le volume / Ajustar el volumen / Einstellung der Lautstärke / Modificare il volume / De geluidssterkte regelen
	Answer an incoming call / Répondre à un appel / Descolgar una llamada / Entgegennehmen eines eingehenden Anrufs / Rispondere a una chiamata / Een inkomend gesprek opnemen
	Refuse an incoming call / Refuser un appel / Colgar una llamada / Beenden eines eingehenden Anrufs / Rifiutare una chiamata / en inkomend gesprek weigeren
	Hang up / Raccrocher / Rechazar / Ablehnen / Riagganciare / Ophangen
	Discreet mode / Mode discret / Modo discreto / Diskreter Modus / Modalità privata / Privacy modus
	Exit discreet mode / Sortir du mode discret / Salir del modo discreto / Beenden des Diskreter Modus / Disattivare la modalità privata / De discrete modus opheffen
	Start the voice recognition feature / Lancer la reconnaissance vocale / Iniciar el modo de reconocimiento de voz / Aktivieren der Spracherkennung / Attivare la funzione di ricon. vocale / De modus Spraakherkenning sluiten
	Redial function / Fonction Bis / Función de rellamada / Wiederholung des letzten Anrufs / Funzione Bis / Bis functie

2 - Features

Depending on the steering wheel control in your vehicle, the MULTICAN / MULTICOMM interface will enable you to take full advantage of the telephone and music functions in 4 different modes: Mode 1, Mode 2 & Mode 3. The selection of this mode depends on the protocol of the vehicle.

Note : Pictograms on the buttons depend on the model of the vehicles.



Short press



2 short presses



Long press



Volume



Seek



Pick up - Hang up
